

ADVERTISING PILLAR VENTO®

MOUNTING SET



x 1

hand pump



x 4

straight pin with eyelet and extraction ropes




x 4/8*

straight pin with eyelet



x 1

hammer

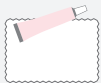

x 1

repair set



x 1

built-in cover

*depending of pillar size

ASSEMBLY INSTRUCTION

- 1** Unzip the transport bag.
- 2** Pull out the center of pillar and stretch it to its full length. Find the inflate/deflate valve and unscrew the cap.
- 3** Lock the valve by turning the needle of the diaphragm about 90° to the right, this prevents the escaping of air. Unlock the valve to pump out air by turning the needle about 90° to the left.
- 4** Pin the lines to the lashing eyes in the post with snap hooks.
- 5** Start filling the pillar with air using the included hand pump (optional electric) with a dedicated tip.
- 6** Stabilize the pillar with ropes.
- 7A** Fasten the pillar to the ground with straight pins. The lashing lines should be tensioned and stretched to their full length.
- 7B** For substrates that prevent the use of pins/anchors, use dedicated weights or weight bags for lashing lines.